


OLED Display

Written By: Pete Prodoehl

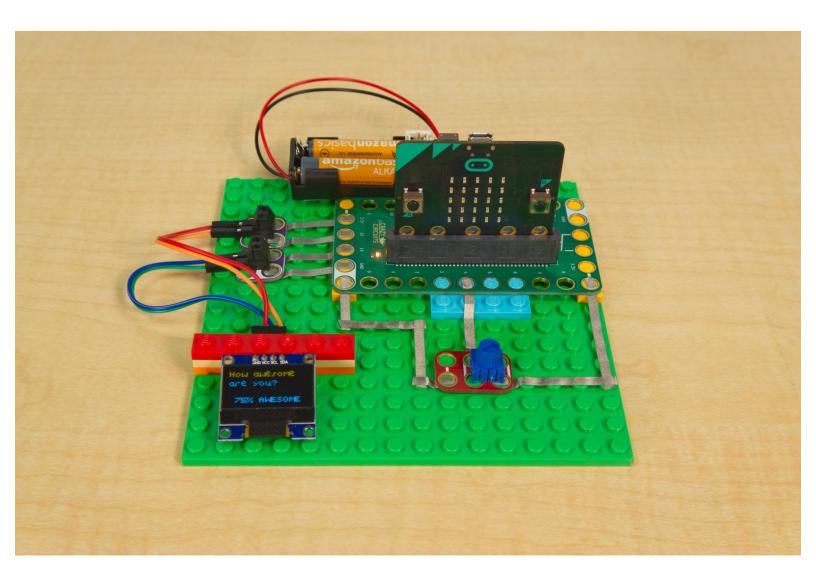

INTRODUCTION

Connect a small OLED Display to the Bit Board and control it using MakeCode on the micro:bit. Display text and simple shapes.

TOOLS:

- Computer (1)
- Scissors (1)
- Slotted Screwdriver (1)

PARTS:

- Crazy Circuits Bit Board (1)
- micro:bit (1)
- Crazy Circuits Potentiometer Chip (1)
- Crazy Circuits Screw Terminal Chip (2)
- Maker Tape (1)

1/8" Wide


- LEGO Baseplate (1)
- Misc LEGO Parts (1)
- Male to Female Ribbon Cable (4)
- OLED Display (1)

Step 1 — What is an OLED Display?

	Product Size	
Front Back	27.4mm 26.5mm 2 rows of yellow 6 rows of blue	HOW GUESONE EXI, NIESONE EXI, NIESONE


- An OLED (or organic light-emitting diode) is a type of light-emitting diode (LED) in which the emissive electroluminescent layer is a film of organic compound that emits light in response to an electric current.
- Without getting too deep into the science of it, OLED displays are small screens you can connect to a micro:bit or other electronics controller to display text and graphics.
- OLED Displays (like most electronic components) have come down in price in recent years. We found a <u>5-pack for under \$20 on Amazon</u>.
- We'll cover connecting an OLED Display to a micro:bit using our Bit Board, and share code and examples of how you can use it.
- OLED Displays come in all different sizes. The one we are using is listed as 128x64 (resolution). It can work at 3.3v to 5v DC, so it's perfect for most microcontrollers.

Step 2 — Build Your Circuit

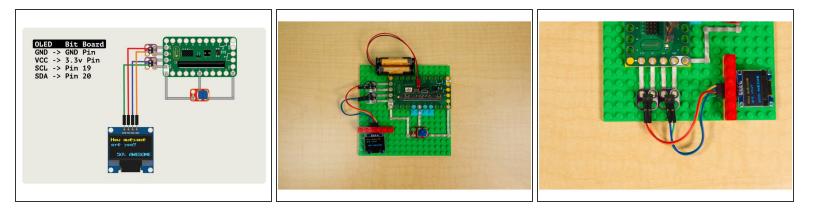


- The OLED Display will connect to the Bit Board using the I2C bus. We've also got a potentiometer connected to Pin 4 to read an analog value as our input.
- Connect the OLED Display module to the Bit Board so that the VCC goes to 3.3v and GND goes to GND so the Bit Board can power the module.
- Next, connect SCL to Pin 19 and SDA to Pin 20.
- (i) Using screw terminals and some 1/8" Maker Tape is the best way to do this, but if you do not have screw terminals you can also just tape down your wires using Maker Tape.
- See our <u>Tape to Wire Connections Guide</u> for tips on taping down wire connections.

Step 3 — Load Test Code

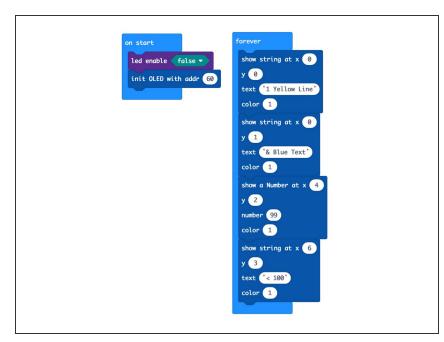

- Connect a USB cable to the micro:bit and then plug it into your computer.
- We'll be using <u>makecode.microbit.org</u> to program our board. It uses a simple drag and drop block interface.
- We're going to load the following code for our OLED Test program: <u>https://makecode.microbit.org/_ivdau</u> <u>uMce...</u>
- You code should run after it's loaded onto the micro:bit and you should see text appear on the OLED Display.

Step 4 — Simple Drawings

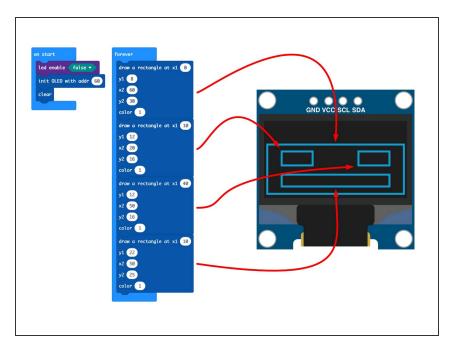


- The OLED Display isn't just limited to text. You can also draw lines and rectangles, as well as turn on individual pixels.
- Now load this code for our OLED
 Rectangle Face program: https://makecode.microbit.org/_eLvF
 Da8EP...
- You should see a simple face displayed on the screen. (It's just four rectangles.)

Step 5 — The Extension

← Colbeck	Extensions	?	← Co back	Extensions		\$			
exact and the second	Image: Term of the second se	Next'e Kodex 000 etermine for pr event an nove Lass hove	CALC CALCENT CALCENT CA	Reserve the second seco	CURRENCE CURREN	es in	I OLED12864.J2C	drum a rectangia at x1 () x2 () y2 () y2 () color () drum a vertical line at x () y () color () drum a horizontal line at x () y () namer () namer () color ()	set plust at a) y) color) Invert display true • draw Char turn on turn off


- There are a few different extensions in MakeCode for using OLED Displays with the micro:bit
- You can search for **OLED** and you'll get a lot of results. We searched for **SSD1306** (since this is the controller chip used by the display) and it helped narrow down the results a bit.
- Each extension is a little different, so check out the commands that each offers. We used the OLED12864_I2C extensions for our code. (And if you use our code it will automatically load it for you.)

Step 6 — Load the Awesome Code

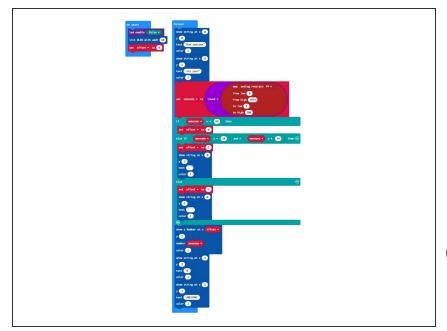


- Let's get our *awesome* project going! Load this code for our OLED Awesome Meter program: <u>https://makecode.microbit.org/_4whF</u> <u>69UAP...</u>
- Once the code is loaded to your micro:bit it should start running right away... prepare to be awesome!
- The code may *look* a little complex, but this is due to wanting things to line up when we change from 1 digit (0-9) to 2 digits (10-99) to 3 digits (100).
- (i) We set a variable named offset and then use it to adjust where it starts displaying the number. Then we just check the **awesome** variable with some **if/else** statements and adjust the offset variable accordingly.

Step 7 — Test it Out!

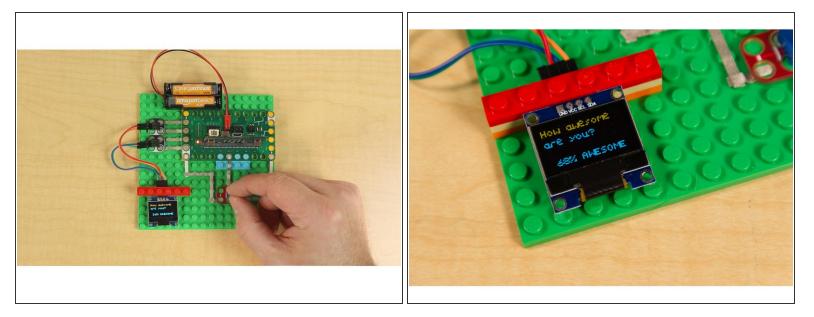

- Turn the potentiometer and you can see how AwEsOmE you are... 10%? 33%? Or maybe you are 100% Awesome!!!
- (i) If you turn the potentiometer clockwise and you become less awesome, just lift it from your circuit, rotate it 180 degrees, and put it back in place. (Connecting it backwards means it will decrease instead of increase when turned clockwise.)

Step 8 — Take it Further

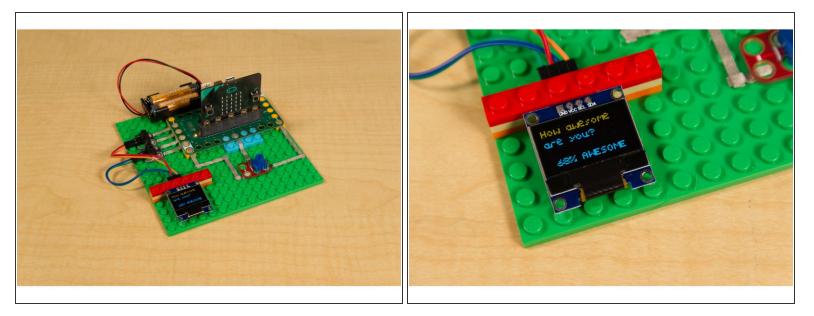

- Hopefully you'll have fun determining how awesome you are, but your OLED Display can do a lot more! What else might you display?
- You could connect a <u>Distance Sensor</u> and then have the display show you how far away an object is...
- You could connect a <u>Temperature and Humidity Sensor</u> and then display data on the small screen...
- You could make a simple score keeping device for up to four players. Each player could have a button to increase their points and you could add a reset button to start a new game!